



QuantityWare Working Paper

ASTM D1250-19 Addendum 2 Analysis

Observable calculation differences using rounded and non-rounded CTPL factors

Version History

Version	Date	Description
00	2020-03-03	Initial Version
01	2020-03-23	Editorial revision
02	2020-06-16	Editorial revision
03	2020-07-15	Editorial revision
04	2021-09-25	Modern QW document style applied
05	2023-11-01	Editorial revision and confirmation

Contents

1. Introduction & Management Summary	4
2. ASTM D1250 – Comparison Calculations for Different Storage Sizes	5
2.1. Railcar Comparison	7
2.2. Pipeline Batch Comparison	9
2.3. Refinery Tank Comparison	10
3. Conclusion	11

1. Introduction & Management Summary

ASTM D1250 has been issued as a new version with the designation [ASTM D1250-19](#). This version is necessary due to the publication of API MPMS Chapter 11.1 Addendum 2 (May 2019). Ten (10) changes are listed in Addendum 2 which are classified as “minor” modifications in ASTM D1250-19.

One of these modifications requires that final densities and volumes should be calculated with **non-rounded volume correction factors** (CTL, CPL and CTPL). This modification affects calculation results of current ASTM D1250-04 BCS implementations and thus requires an advanced development such that the calculation models assigned to API MPMS Chapter 11.1 can be configured (via a switch in the conversion group settings) to apply non-rounded volume correction factors to quantity conversion calculations.

This advanced development is shipped via QuantityWare [note 000090](#) (Available since March 2020).

In this working paper, we compare calculation results with and without a rounded CTPL for different storage sizes and discuss the differences.

Stock control and pipeline measurements, product discharge from trucks and railcars as well as opening and closing tank dips in large tanks subsequently utilize such calculations, allowing a precise determination of product quantities (e.g., transferred mass and weight quantities of product out of a tank, calculation of net standard volumes (NSV) and so on).




As demonstrated in this paper, when applied to a single product, different well-defined measurement-standard based calculations may lead to small, but noticeable differences of relevant product quantity values and properties. Thus, it is of utmost importance that business partners agree on a common measurement standard basis for their business transaction processes.

2. ASTM D1250 – Comparison Calculations for Different Storage Sizes

For the comparison calculations, we utilize two QuantityWare conversion groups, that are derived from our [BCS](#) template. Conversion group Q212 is the reference template conversion group based on ASTM D1250-04 CTPL factors, which are rounded to 5 decimals.

Conversion group W212 is a copy of Q212, where we simply set the indicator to not round the CTPL (VCF) factor and utilize the non-rounded factor for the quantity calculations.

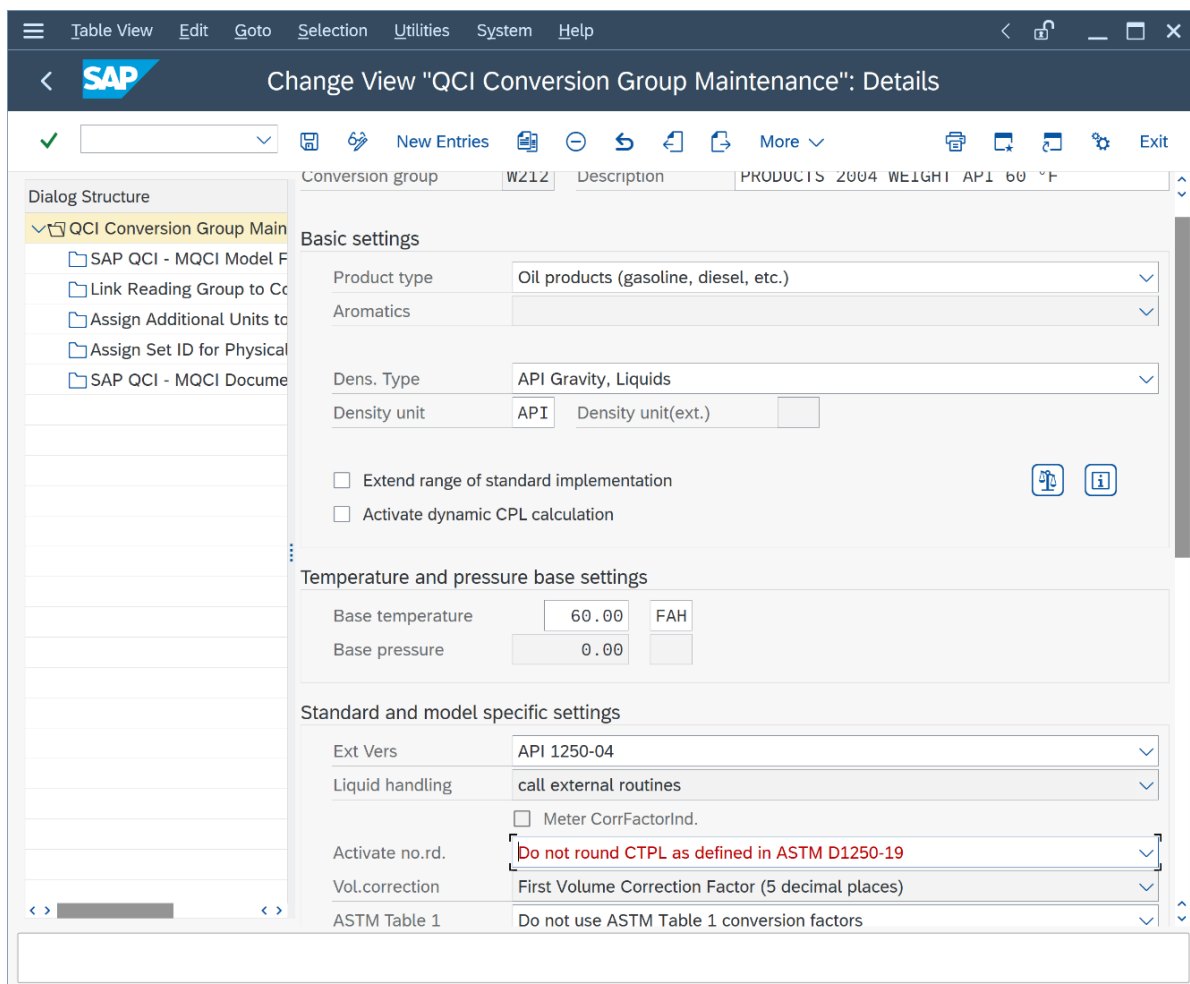

The screenshot displays the SAP 'Change View "QCI Conversion Group Maintenance": Details' dialog box. The 'Conversion group' is W212, and the 'Description' is 'PRODUCTS - 2004 WEIGHT API 60 °F'. The 'Basic settings' section includes 'Product type' (Oil products (gasoline, diesel, etc.)), 'Aromatics', 'Dens. Type' (API Gravity, Liquids), and 'Density unit' (API). The 'Temperature and pressure base settings' section shows 'Base temperature' (60.00 FAH) and 'Base pressure' (0.00). The 'Standard and model specific settings' section includes 'Ext Vers' (API 1250-04), 'Liquid handling' (call external routines), 'Activate no.rd.' (Do not round CTPL as defined in ASTM D1250-19), 'Vol.correction' (First Volume Correction Factor (5 decimal places)), and 'ASTM Table 1' (Do not use ASTM Table 1 conversion factors).

For the comparison calculations, we utilize three different capacity sizes. A railcar, a pipeline batch, and a refinery tank.

We define a unit of measure (UoM) group WPA with six different UOM, that are rounded as defined in API MPMS Chapter 11.5 – Table 1 – Significant Digits for Bulk Quantities:

BB6 – (NSV) – barrel at 60 °F – rounded to 2 decimals

UG6 – (NSV) – gallon at 60 °F – rounded to 0 decimals

LB – (NSM) – pounds – rounded to 0 decimals

LBA – (NSW) – pounds – rounded to 0 decimals


LTA – (NSW) – long tons – rounded to 3 decimals (API MPMS Chapter 11.5 defines 4 decimals – SAP only allows quantity values with up to 3 decimals in the display of the Oil & Gas Test Calculator)

LTO – (NSM) – long tons – rounded to 3 decimals (see LTA)

The CTPL factor is labelled VCF in the Oil & Gas Test Calculator. To visualize the unrounded VCF, the display settings for the UoM VCF are set to 12. As transaction UoM we utilize UGL (NOV) – gallon and BBL (NOV) – barrel. For the sake of simplicity, the product density is kept at 30 °API for all comparison calculations and the product temperature may vary to produce CTPL with different absolute deviations.

2.1. Railcar Comparison

For the railcar comparison example, we chose a railcar capacity of 32 000 gallons, which is e.g., close to the capacity of a DOT 111 tank car and which is measured to contain 30 000 gallons of product. :

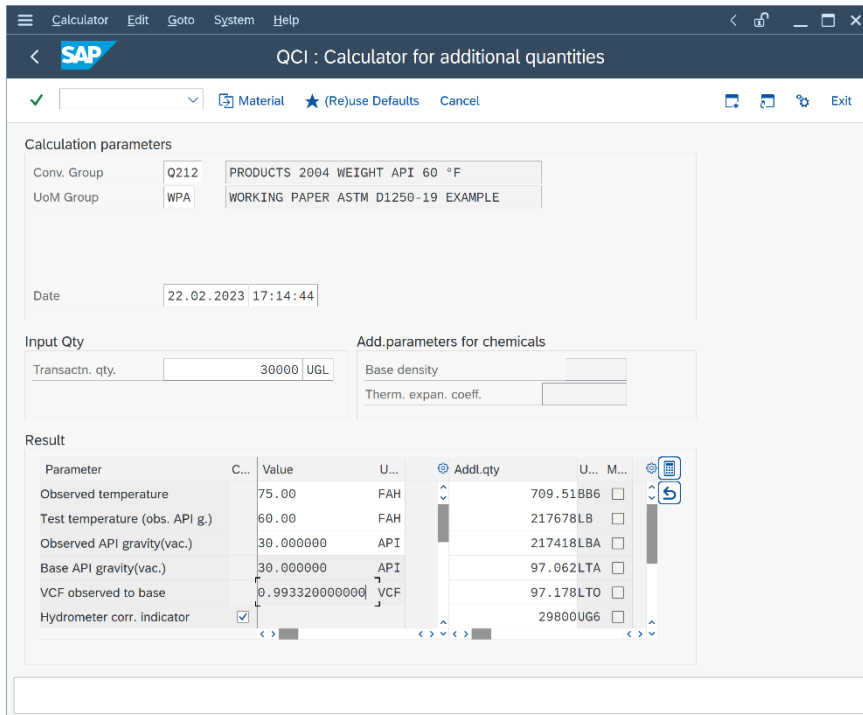

QCI : Calculator for additional quantities

Calculation parameters

Conv. Group: Q212 PRODUCTS 2004 WEIGHT API 60 °F
 UoM Group: WPA WORKING PAPER ASTM D1250-19 EXAMPLE

Date: 22.02.2023 17:14:44


Input Qty: Transactn. qty. 30000 UGL

Add.parameters for chemicals

Base density:
 Therm. expan. coeff.:

Result

Parameter	C...	Value	U...	Addl.qty	U...	M...
Observed temperature		75.00	FAH		709.51BB6	☐
Test temperature (obs. API g.)		60.00	FAH		217678LB	☐
Observed API gravity(vac.)		30.000000	API		217418LBA	☐
Base API gravity(vac.)		30.000000	API		97.062LTA	☐
VCF observed to base		0.993320000000	VCF		97.178LTO	☐
Hydrometer corr. indicator	☒				29800UG6	☐

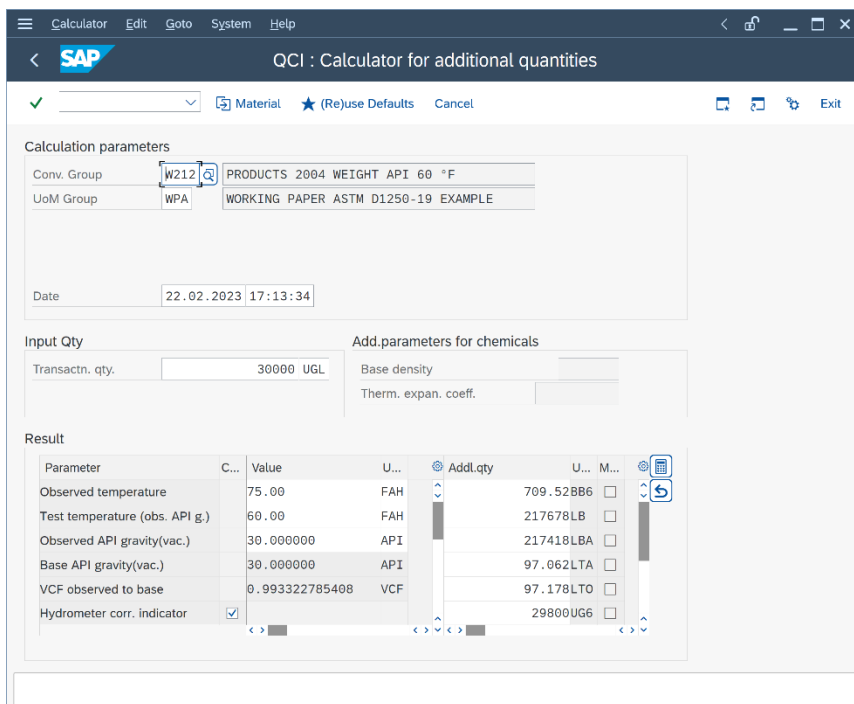

QCI : Calculator for additional quantities

Calculation parameters

Conv. Group: W212 PRODUCTS 2004 WEIGHT API 60 °F
 UoM Group: WPA WORKING PAPER ASTM D1250-19 EXAMPLE

Date: 22.02.2023 17:13:34

Input Qty: Transactn. qty. 30000 UGL

Add.parameters for chemicals


Base density:
 Therm. expan. coeff.:

Result

Parameter	C...	Value	U...	Addl.qty	U...	M...
Observed temperature		75.00	FAH		709.52BB6	☐
Test temperature (obs. API g.)		60.00	FAH		217678LB	☐
Observed API gravity(vac.)		30.000000	API		217418LBA	☐
Base API gravity(vac.)		30.000000	API		97.062LTA	☐
VCF observed to base		0.993322785408	VCF		97.178LTO	☐
Hydrometer corr. indicator	☒				29800UG6	☐

There is only a small noticeable difference between the two BB6 results of 0.01 BB6. This is as expected, since the rounded CTPL and the unrounded CTPL are identical to five significant digits, thus one expects small differences at the fifth significant digit or higher.

A second example with an observed temperature of 81 °F illustrates this general statement:

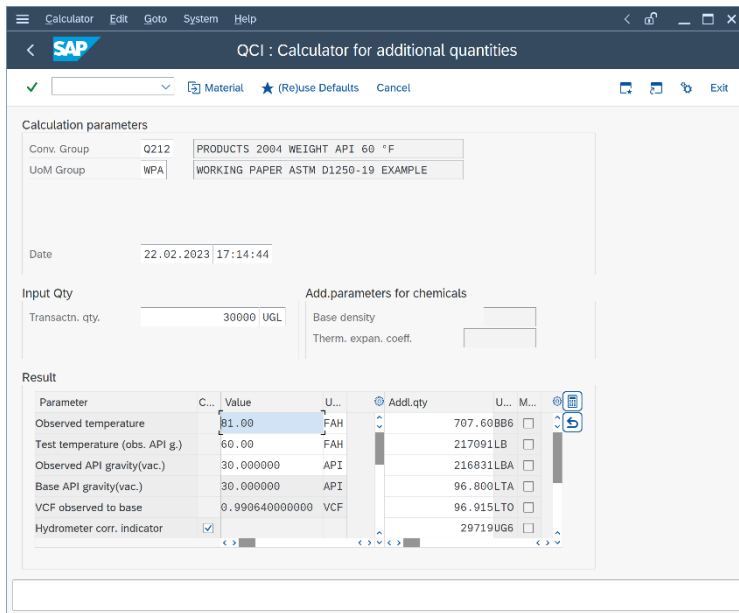

Calculation parameters

Conv. Group: Q212 PRODUCTS 2004 WEIGHT API 60 °F
UoM Group: WPA WORKING PAPER ASTM D1250-19 EXAMPLE


Date: 22.02.2023 17:14:44

Input Qty: Transactn. qty. 30000 UGL

Add.parameters for chemicals: Base density, Therm. expan. coeff.

Result

Parameter	C...	Value	U...	Addl.qty	U...	M...
Observed temperature		81.00	FAH		707.60BB6	☐
Test temperature (obs. API g.)		60.00	FAH		217091LB	☐
Observed API gravity(vac.)		30.000000	API		216831LBA	☐
Base API gravity(vac.)		30.000000	API		96.800LTA	☐
VCF observed to base		0.990640000000	VCF		96.915LTO	☐
Hydrometer corr. indicator	☒				29719UG6	☐

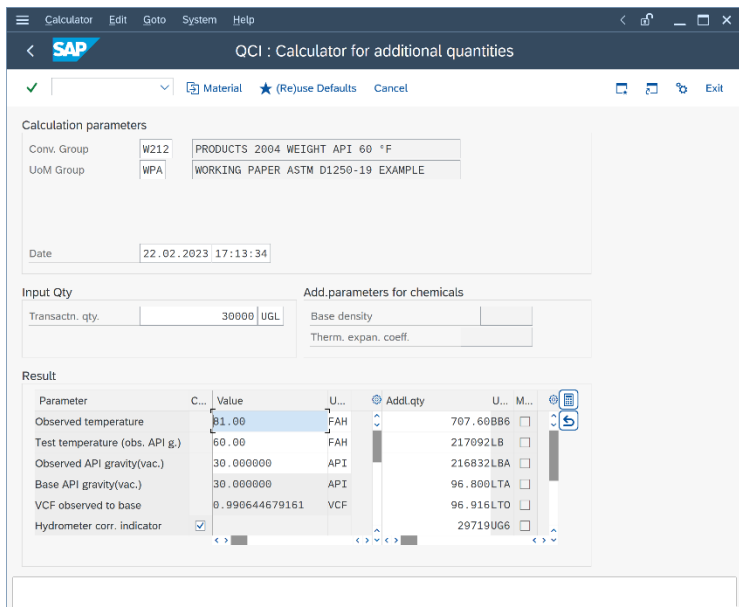

Calculation parameters

Conv. Group: W212 PRODUCTS 2004 WEIGHT API 60 °F
UoM Group: WPA WORKING PAPER ASTM D1250-19 EXAMPLE

Date: 22.02.2023 17:13:34

Input Qty: Transactn. qty. 30000 UGL

Add.parameters for chemicals: Base density, Therm. expan. coeff.


Result

Parameter	C...	Value	U...	Addl.qty	U...	M...
Observed temperature		81.00	FAH		707.60BB6	☐
Test temperature (obs. API g.)		60.00	FAH		217092LB	☐
Observed API gravity(vac.)		30.000000	API		216832LBA	☐
Base API gravity(vac.)		30.000000	API		96.800LTA	☐
VCF observed to base		0.990644679161	VCF		96.916LTO	☐
Hydrometer corr. indicator	☒				29719UG6	☐

Here, the LB, LBA and LTO result differ by 1 unit each, the other values appear identical (due to rounding). Let's move to the second example of a typical pipeline batch, where the quantities involved are larger.

2.2. Pipeline Batch Comparison

For the pipeline batch example, we utilize a batch size of 30 000 BBL.

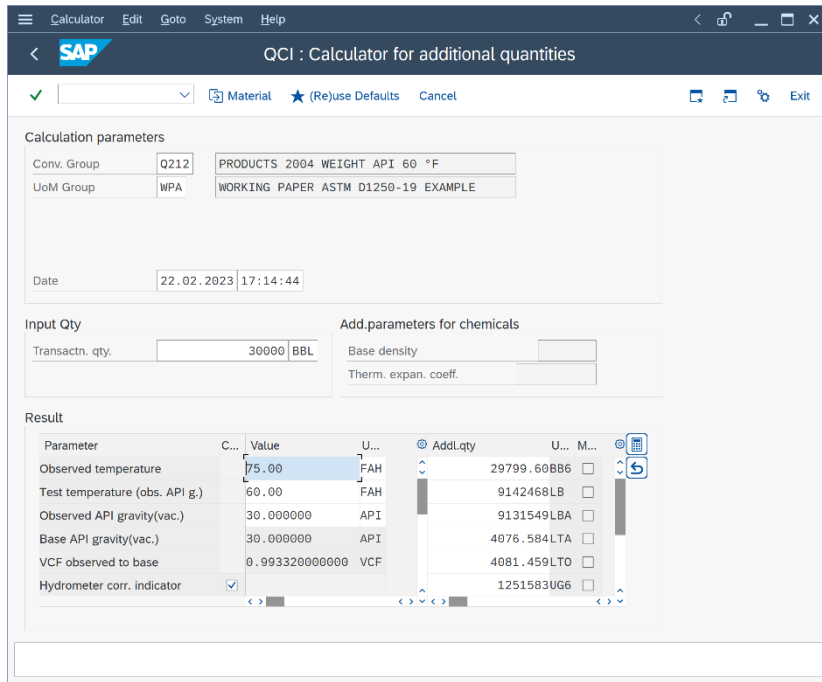

Calculation parameters

Conv. Group	Q212	PRODUCTS 2004 WEIGHT API 60 °F
UoM Group	WPA	WORKING PAPER ASTM D1250-19 EXAMPLE


Date: 22.02.2023 17:14:44

Input Qty
Transactn. qty.: 30000 BBL

Add.parameters for chemicals
Base density:
Therm. expan. coeff.:

Result

Parameter	C...	Value	U...	Add.Lqty	U...	M...
Observed temperature		75.00	FAH		29799.60	BB6
Test temperature (obs. API g.)		60.00	FAH		9142468	LB
Observed API gravity(vac.)		30.000000	API		9131549	LBA
Base API gravity(vac.)		30.000000	API		4076.584	LTA
VCF observed to base		0.993320000000	VCF		4081.459	LTO
Hydrometer corr. indicator	☒				1251583	UG6

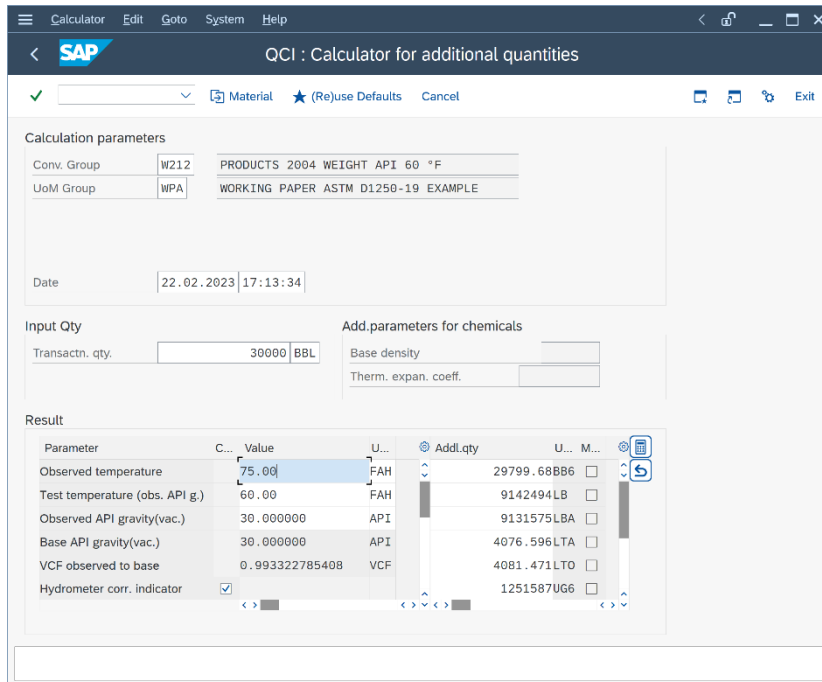

Calculation parameters

Conv. Group	W212	PRODUCTS 2004 WEIGHT API 60 °F
UoM Group	WPA	WORKING PAPER ASTM D1250-19 EXAMPLE

Date: 22.02.2023 17:13:34

Input Qty
Transactn. qty.: 30000 BBL

Add.parameters for chemicals
Base density:
Therm. expan. coeff.:


Result

Parameter	C...	Value	U...	Add.Lqty	U...	M...
Observed temperature		75.00	FAH		29799.68	BB6
Test temperature (obs. API g.)		60.00	FAH		9142494	LB
Observed API gravity(vac.)		30.000000	API		9131575	LBA
Base API gravity(vac.)		30.000000	API		4076.596	LTA
VCF observed to base		0.993322785408	VCF		4081.471	LTO
Hydrometer corr. indicator	☒				1251587	UG6

Here, all results show a noticeable difference, as expected.

2.3. Refinery Tank Comparison

For the final comparison we utilize a refinery tank with a capacity of 400 000 BBL, which is measured to contain 300 000 BBL:

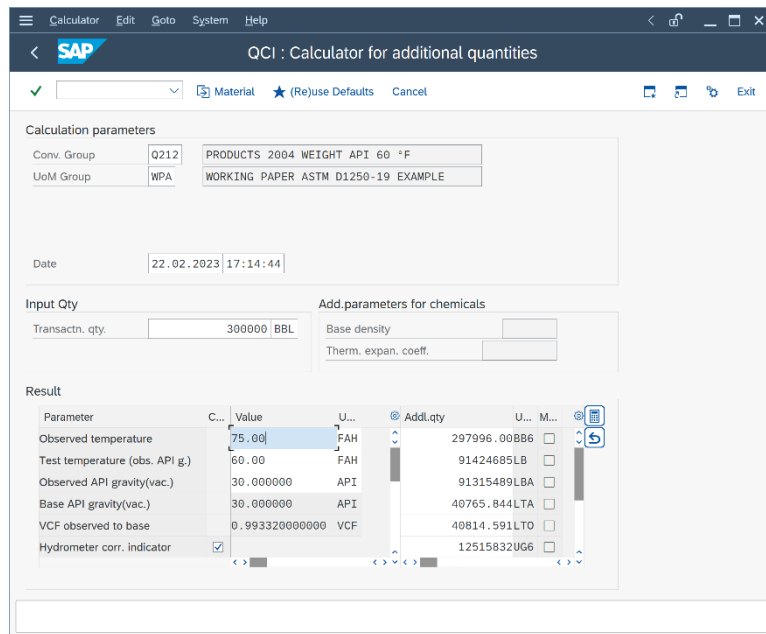

Calculator Edit Goto System Help

SAP QCI : Calculator for additional quantities

Material (Re)use Defaults Cancel

Calculation parameters

Conv. Group: Q212 PRODUCTS 2004 WEIGHT API 60 °F

UoM Group: WPA WORKING PAPER ASTM D1250-19 EXAMPLE

Date: 22.02.2023 17:14:44

Input Qty: Transactn. qty. 300000 BBL


Add.parameters for chemicals

Base density:

Therm. expan. coeff.:

Result

Parameter	C...	Value	U...	Addl.qty	U...	M...
Observed temperature		75.00	FAH		297996.00	BBL
Test temperature (obs. API g.)		60.00	FAH		91424685	LB
Observed API gravity(vac.)		30.000000	API		91315489	LBA
Base API gravity(vac.)		30.000000	API		40765.844	LTA
VCF observed to base		0.993320000000	VCF		40814.591	LTO
Hydrometer corr. indicator	☒				12515832	UG6

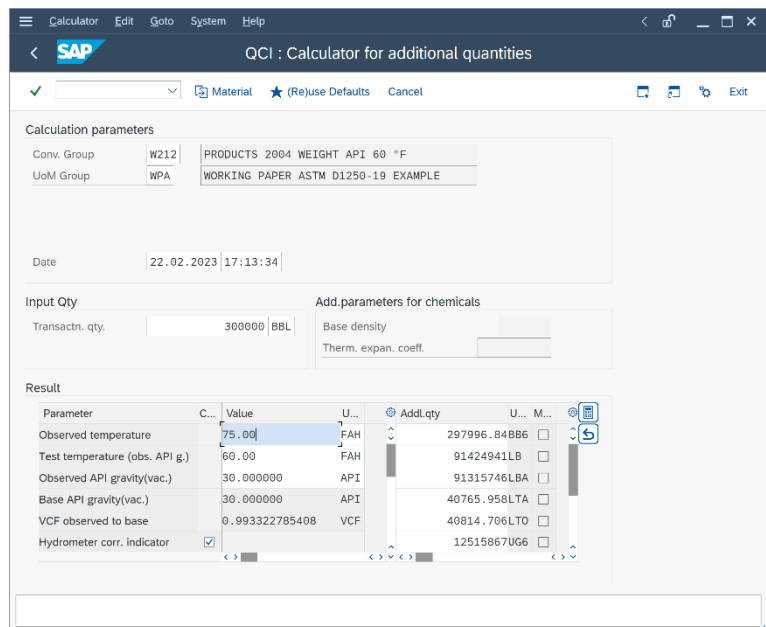

Calculator Edit Goto System Help

SAP QCI : Calculator for additional quantities

Material (Re)use Defaults Cancel

Calculation parameters

Conv. Group: W212 PRODUCTS 2004 WEIGHT API 60 °F

UoM Group: WPA WORKING PAPER ASTM D1250-19 EXAMPLE

Date: 22.02.2023 17:13:34

Input Qty: Transactn. qty. 300000 BBL

Add.parameters for chemicals

Base density:

Therm. expan. coeff.:

Result

Parameter	C...	Value	U...	Addl.qty	U...	M...
Observed temperature		75.00	FAH		297996.84	BBL
Test temperature (obs. API g.)		60.00	FAH		91424941	LB
Observed API gravity(vac.)		30.000000	API		91315746	LBA
Base API gravity(vac.)		30.000000	API		40765.958	LTA
VCF observed to base		0.993322785408	VCF		40814.706	LTO
Hydrometer corr. indicator	☒				12515867	UG6

As expected, the absolute differences increase, and all quantity value results differ at the sixth significant digit.

3. Conclusion

With [QuantityWare BCS](#), a comparison of calculation results between ASTM D1250-04 CTPL and ASTM D1250-19 non-rounded CTPL - data is made transparent to business users in all SAP Oil, Gas, & Energy logistics transactions. The comparison calculations that we described briefly in this working paper are all reproducible with QuantityWare BCS being installed in your system in your reference template client.



As shown by these comparison calculations, the question concerning such calculations is not how accurately the results of different measurement standard implementations match, but that business partners need to agree as to which measurement standards are to be utilized in which country for each of their bulk products, to avoid process disruptions.

With QuantityWare BCS, a change from ASTM D1250-04 CTPL calculations to ASTM D1250-19 CTPL calculations is a simple configuration click in a conversion group – which should be based on a transparent business decision and executed by a [certified BCP consultant](#).

Legacy “C-code” solutions would require an involved process to license, obtain, compile and test a new “C” version, along with the necessary integration of the new executable version into the SAP Oil, Gas, & Energy QCI without the flexibility of “on/off” configuration control for the new rounding logic ; as with external executable usage, multiple executables would need to be installed and managed with all associated inherent risks.

Legal Notices

© Copyright 2023 QuantityWare GmbH. All rights reserved.

SAP, R/3, mySAP, mySAP.com, xApps, xApp, SAP NetWeaver, and other SAP products and services mentioned herein as well as their respective logos are trademarks or registered trademarks of SAP AG in Germany and in several other countries all over the world. All other product and service names mentioned are the trademarks of their respective companies.

Microsoft, Windows, SQL-Server, PowerPoint and Outlook are registered trademarks of Microsoft Corporation.

These materials and the information therein are subject to change without notice. These materials are provided by the company QuantityWare GmbH for informational purposes only. There is no implied representation or warranty of any kind, and QuantityWare GmbH shall not be liable for errors or omissions with respect to the materials provided. The only warranties for the products and services of QuantityWare GmbH are those set forth in the express warranty statements accompanying such products and services, if any. No statement within this document should be construed as constituting an additional warranty.